

Phonak Roger SoundField – Quick Guide

Roger SoundField: Combined performance

This guide has been designed to support the use of your Roger systems. It will provide you a quick overview of components and how to use them.



Activate the Speaker and Microphones:

Speaker:

Connect power supply to the speaker and turn via the switch located at the bottom of the speaker.



DSF Speaker:

On/Off Switch

Power Cable



Indicator light

Meaning



TSM off, out of range or in small group mode



TSM is connected and ready for operation




TSM muted

Touchscreen Microphone (TSM):

Before getting started, fully charge microphones.

Note: (It take approx. 2 hours to fully charge microphones)

1. Turn on TSM
2. Place the TSM around neck, the distance from the mouth to the top of the TSM should be around 20cm.

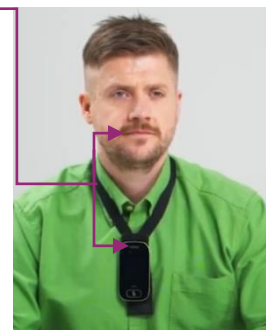

TSM Teacher Microphone



Microphones

Ensure that these are always facing forward & are not covered.

Connect

Connects nearby Roger devices. Roger devices need to be within 10cm of the TSM to be connected.

Mute/unmute

Indication light

On/Off
Press for 3 sec to tune on

Battery indicator

Pass-around Microphone Student Microphone



Microphone

Hold microphone around 5-10cm from mouth.

Indication light

On/Off

Charging Socket